


WESTERN PRESSURE CONTROLS 2005 LTD.



TOOL

N-LOCK (OTIS STYLE S-LOCK)

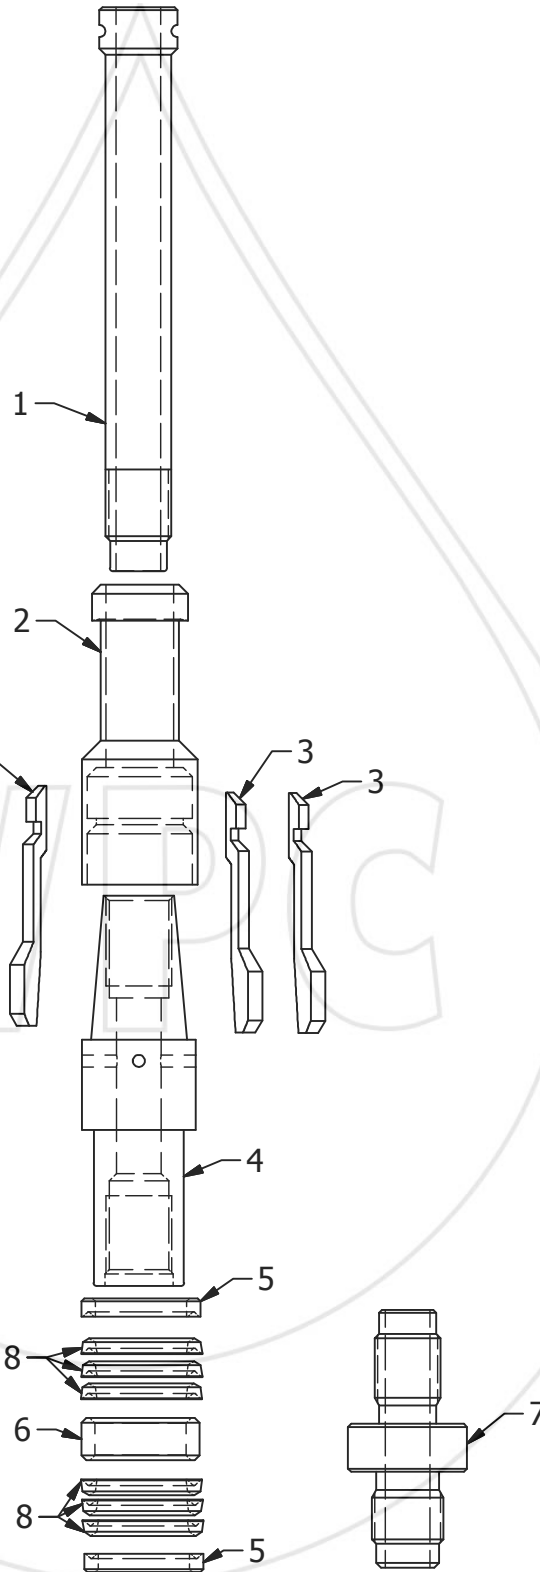

**WESTERN PRESSURE
CONTROLS 2005 LTD.**
10021-56TH AVENUE
EDMONTON, AB, CA
PH: (780) 437-3615
FX: (780) 437-3616

www.westernpressure.com

WESTERN PRESSURE CONTROLS 2005 LTD.

#	PART NAME	1.250"	1.625"	1.875"	2.313"
	ASSEMBLY	OM1.250NL00	OM1.625NL00	OM1.875NL00	OM2.313NL00
1	RUNNING NECK	OM1.250NL01	OM1.625NL01	OM1.875NL01	OM2.313NL01
2	DOG CARRIER	OM1.250NL02	OM1.625NL02	OM1.875NL02	OM2.313NL02
3	DOG	OM1.250NL03	OM1.625NL03	OM1.875NL03	OM2.313NL03
4	MANDREL	OM1.250NL04	OM1.625NL04	OM1.875NL04	OM2.313NL04
5	FEMALE BACK-UP RING	OM1.250NL05	OM1.625NL05	OM1.875NL05	OM2.313NL05
6	MALE BACK-UP RING	OM1.250NL06	OM1.625NL06	OM1.875NL06	OM2.313NL06
7	NO-GO SUB	OM1.250NL07	OM1.625NL07	OM1.875NL07	OM2.313NL07
8	PACKING NITRILE	OVP91V345NK	OVP91V6250NK	OVPV310NK	OVP91V318NK
8	PACKING MOLYGLASS TEFLON	OVP91V3473MG	OVP91V3618MG	OVP91V4411MG	OVP91V4308MG

#	2.875"	3.500"
	OM2.875NL00	OM3.500NL00
1	OM2.875NL01	OM3.500NL01
2	OM2.875NL02	OM3.500NL02
3	OM2.875NL03	OM3.500NL03
4	OM2.875NL04	OM3.500NL04
5	OM2.875NL05	OM3.500NL05
6	OM2.875NL06	OM3.500NL06
7	OM2.875NL07	OM3.500NL07
8	OVP91V318NK	OVP91V3376NK
8	OVP91V4308MG	OVP91V4397MG

PURPOSE:

To set in any type "N" landing nipple.

TOOL

N-LOCK
(OTIS STYLE S-LOCK)



WESTERN PRESSURE CONTROLS 2005 LTD.
10021-56TH AVENUE
EDMONTON, AB, CA
PH: (780) 437-3615
FX: (780) 437-3616

www.westernpressure.com