


# WESTERN PRESSURE CONTROLS 2005 LTD.

OUTSIDE DIAMETER	FISHNECK O.D.	BOTTOM CONNECTION	WIRE DIAMETER
1.250"	1.188"	5/8 S.R.	1/8", 3/16", 7/32", 1/4"
1.500"	1.375"	5/8 S.R.	1/8", 3/16", 7/32", 1/4", 5/16"
1.750"	1.750"	3/4 S.R.	1/8", 3/16", 7/32", 1/4", 5/16"

PART NUMBERS	1.250"	1.500"	1.750"
ASSEMBLY	S1.250MSRS00	S1.500MSRS00	S1.750MSRS00
BODY 1/8" LINE	S1.250RS08	S1.500RS03	S1.750RS03
BODY 3/16" LINE	S1.250RS09	S1.500RS03	S1.750RS03
BODY 7/32" LINE	S1.250RS02	S1.500RS03	S1.750RS03
BODY 1/4" LINE	S1.250RS10	S1.500RS17	S1.750RS17
BODY 5/16" LINE		S1.500RS18	S1.750RS18
WEDGE 1/8" LINE	S1.250RS05	S1.500RS14	S1.500RS14
WEDGE 3/16" LINE	S1.250RS06	S1.500RS01	S1.500RS01
WEDGE 7/32" LINE	S1.250RS04	S1.500RS09	S1.500RS09
WEDGE 1/4" LINE	S1.250RS07	S1.500RS08	S1.500RS08
WEDGE 5/16" LINE		S1.500RS02	S1.500RS02
SLIPS 1/8" LINE	S1.250RS11	S1.500RS15	S1.500RS15
SLIPS 3/16" LINE	S1.250RS12	S1.500RS15	S1.500RS15
SLIPS 7/32" LINE	S1.250RS13	S1.500RS15	S1.500RS15
SLIPS 1/4" LINE	S1.250RS14	S1.500RS15	S1.500RS15
SLIPS 5/16" LINE		S1.500RS16	S1.500RS16
SET SCEW	S1.250RS15	S1.500RS19	S1.500RS19
BOTTOM SUB	S1.250RS03	S1.500RS10	S1.750RS10

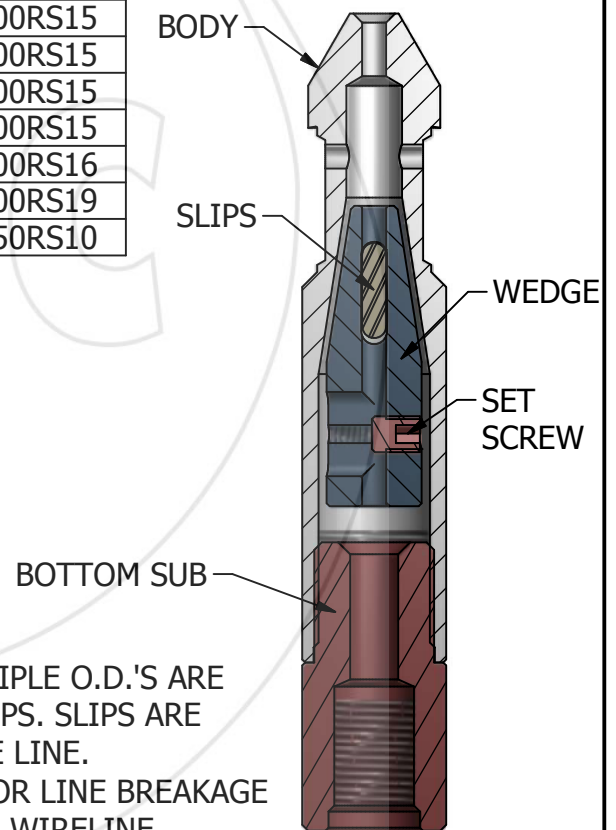

## SLIP STYLE ROPE SOCKET,

ARE USED FOR LINE SIZES UP TO 5/16 IN DIAMETER. MULTIPLE O.D.'S ARE AVAILABLE AS WELL AS DIFFERENT TENSILE STRENGTH SLIPS. SLIPS ARE AVAILABLE FROM 50% TO 90% TENSILE STRENGTH OF THE LINE.

THE SLIP STYLE ROPE SOCKETS PROVIDE A WEAK POINT FOR LINE BREAKAGE IF THE TOOL BECOMES STUCK DOWNWELL, TO ALLOW FOR WIRELINE RETRIVABILITY AND EASY ACCESS TO THE STUCK TOOL.

TOOL


## 1.25", 1.5" AND 1.75" SLIP STYLE ROPE SOCKET



**WESTERN PRESSURE  
CONTROLS 2005 LTD.**  
10021-56TH AVENUE  
EDMONTON, AB, CA  
PH: (780) 437-3615  
FX: (780) 437-3616

[www.westernpressure.com](http://www.westernpressure.com)

# WESTERN PRESSURE CONTROLS 2005 LTD.

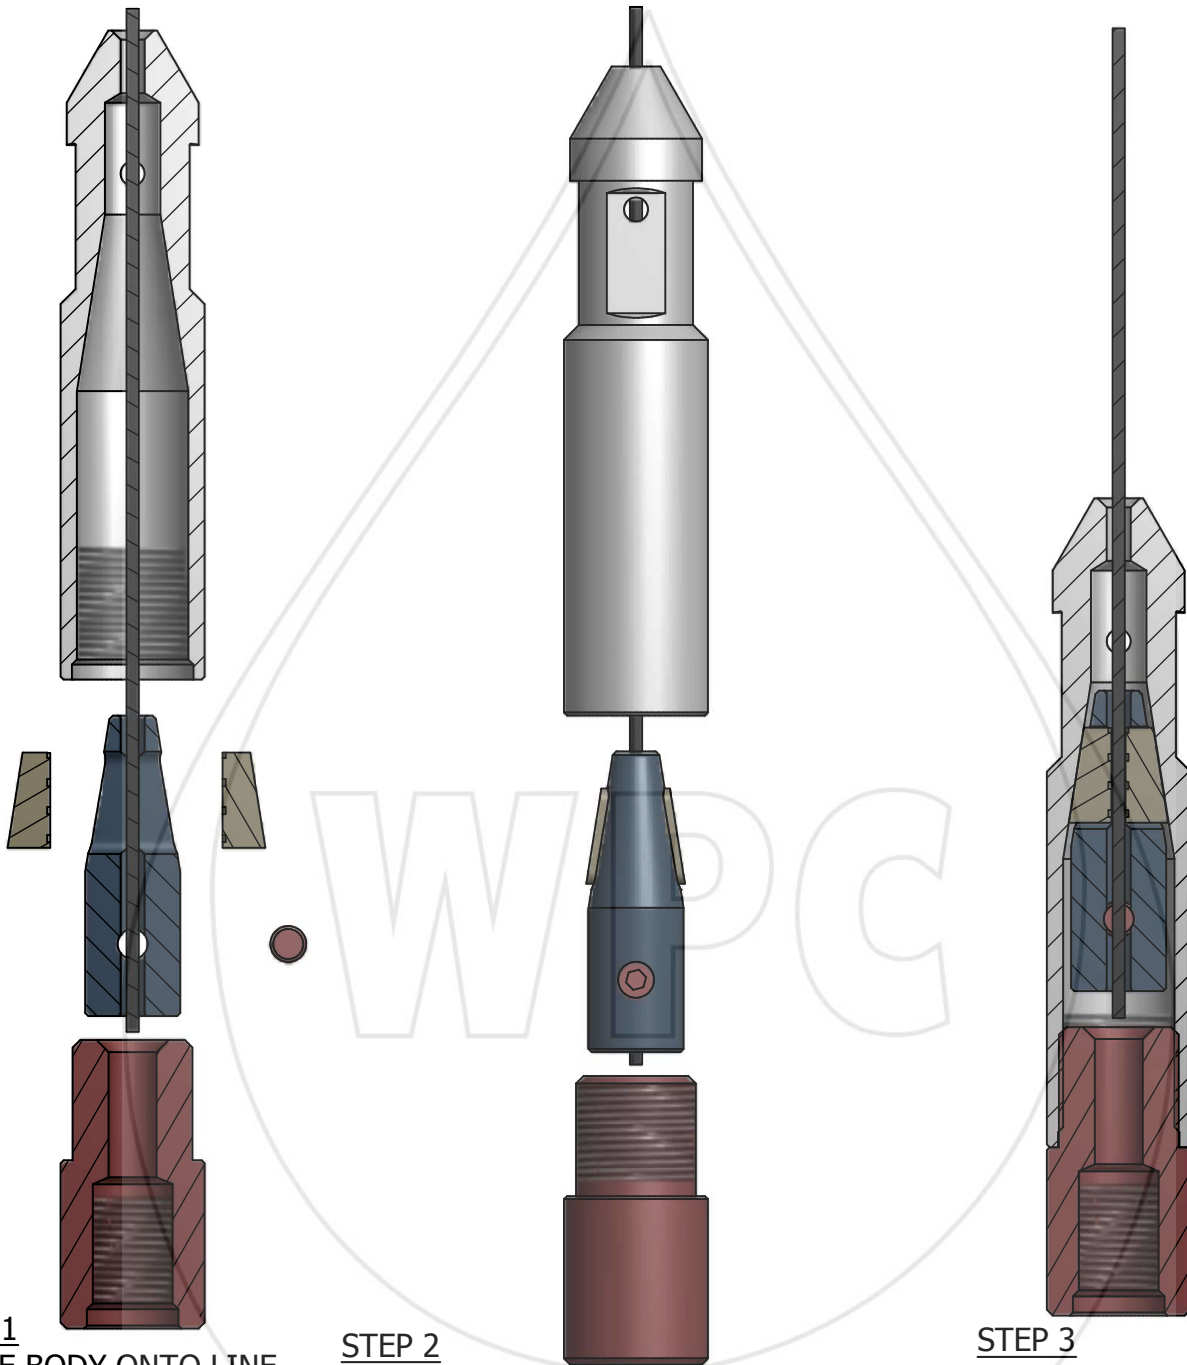

## STEP 1

- SLIDE BODY ONTO LINE
- SLIDE WEDGE ONTO LINE

## STEP 2

- MAKE SURE LINE IS THROUGH WEDGE THEN TIGHTEN SET SCREW TILL SCREW IS FLUSH TO O.D. OF WEDGE
- INSERT SLIPS INTO WEDGE WITH GROOVES AGAINST THE LINE AND THE SMOOTH SURFACE FACING OUT

## STEP 3

- SLIDE BODY OVER WEDGE
- SCREW ON BOTTOM SUB

TOOL

1.25", 1.5" AND 1.75" SLIP STYLE  
ROPE SOCKET ASSEMBLY



**WESTERN PRESSURE  
CONTROLS 2005 LTD.**  
10021-56TH AVENUE  
EDMONTON, AB, CA  
PH: (780) 437-3615  
FX: (780) 437-3616

[www.westernpressure.com](http://www.westernpressure.com)